

AcQuisition Technology bv

Headquarters: Raadhuislaan 27a 5341 GL OSS THE NETHERLANDS

Postal address: P.O. Box 627 5340 AP OSS THE NETHERLANDS

 Phone:
 +31-412-651055

 Fax:
 +31-412-651050

 Email:
 info@acq.nl

 WEB:
 http://www.acq.nl

M393

12-/16-bit ADC Module with 8x Differential Inputs

User Manual

Version 1.7

Copyright statement: Copyright ©2001-2002 by AcQuisition Technology bv - OSS, The Netherlands

All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language, in any form or by any means without the written permission of AcQuisition Technology bv.

Disclaimer:

The information in this document has been carefully checked and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies. AcQuisition Technology does not assume any liability arising out of the application or use of any product or circuit described herein; neither does it convey any license under its patent rights nor the rights of others. AcQuisition Technology products are not designed, intended, or authorized for use as components in systems intended to support or sustain life, or for any other application in which the failure of an AcQuisition Technology product could create a situation where personal injury or death may occur, including, but not limited to AcQuisition Technology products used in defence, transportation, medical or nuclear applications. Should the buyer purchase or use AcQuisition Technology products for any such unintended or unauthorized application, the buyer shall indemnify and hold AcQuisition Technology and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that AcQuisition Technology was negligent regarding the design or manufacture of the part.

Printed in The Netherlands.



CONTENTS

1.	INTROD	UCTION
	1.1.	VALIDITY OF THE MANUAL
	1.2.	PURPOSE
	1.3.	SCOPE
	1.4.	DEFINITIONS, ACRONYMS AND ABBREVIATIONS
	1.5.	Notes Concerning the Nomenclature
	1.6.	OVERVIEW
2.	PRODU	CT OVERVIEW
	2.1.	
	2.2.	TECHNICAL OVERVIEW
	2.2.	
3.		ATION AND SETUP
•	3.1.	UNPACKING THE HARDWARE
	3.2.	CONNECTING THE MODULE
	0.2.	
4.	FUNCTI	ONAL DESCRIPTION
	4.1.	BLOCK DIAGRAM
	4.2.	M-module Interface
	т.∠ .	4.2.1. MEMORY MAP OVERVIEW
		4.2.2. MEASUREMENT DATA WORDS
		4.2.3. COMMAND INTERFACE
		4.2.4. GLOBAL STATUS WORD
		4.2.4. GLOBAL STATUS WORD
		4.2.6. INTERRUPT FLAG WORD
		4.2.8. HOST CONTROL REGISTER
	4.3.	4.2.9. IDENTIFICATION EEPROM
		INPUT CIRCUITRY 16
	4.4.	DATA ACQUISITION
	4.5.	RESET PROCEDURE
	4.6.	M-MODULE OPERATION
		4.6.1. COMMAND SET OVERVIEW
		4.6.2. SYNC COMMAND
		4.6.3. VERSION COMMAND
		4.6.4. SETUP COMMAND
		4.6.5. SETACQTIME COMMAND
		4.6.6. MAFILTER COMMAND
	4.7.	READING SAMPLES
	4.8.	INTERRUPT HANDLING
	_	
5.		ARE
	5.1.	APIS SUPPORT
		5.1.1. CONCEPT
		5.1.2. API
		5.1.3. CODE GENERATION
	5.2.	TYPE DEFINITIONS AND STRUCTURES
	5.3.	FUNCTION REFERENCE
		5.3.1. GENERAL FUNCTIONS
	5.4.	SOFTWARE DISTRIBUTION
6.	ANNEX	



6.1.	BIBLIOGRAPHY	37
6.2.	COMPONENT IMAGE	37
6.3.	TECHNICAL DATA	38
6.4.	DOCUMENT HISTORY	39



1. INTRODUCTION

1.1. VALIDITY OF THE MANUAL

This document is of revision 1.7 and provides information on the use of the M393/R0.x and the M393/R1.x running firmware of revision 1.5 and up. The M393 is a 12-/16-bit ADC M-module with 8x differential inputs.

The M-module revision number is composed as Rx.y where x is the revision of the PCB and y is the revision of the PLD firmware.

The firmware version number consists of a major and a minor number. Firmware versions with the same major number are fully compatible. The minor number will be incremented for minor firmware updates that to not affect the usage of the M-module.

1.2. PURPOSE

This manual serves as instruction for the operation of the M393 Analog Input M-module, the connection of measurement sources and the integration on a M-module carrier. Furthermore it gives the user additional information for special applications and configurations of the product. Detailed information concerning the individual assemblies (data sheets etc.) are not part of this manual. This manual also contains a description of the provided example software.

1.3. SCOPE

The scope of this manual is the usage of the M393 12-/16-bit ADC M-module with 8x Differential Inputs and the APIS based example software written in ANSI-C.

1.4. DEFINITIONS, ACRONYMS AND ABBREVIATIONS

AcQ	AcQuisition Technology bv
APIS	AcQ Platform Interface Software
M-module	Mezzanine I/O concept according to the M-module specification
Platform	Combination of hardware and operating system

1.5. NOTES CONCERNING THE NOMENCLATURE

Hex numbers are marked with a leading "0x"-sign: for example: 0x20 or 0xff.

File names are represented in italic: *filename.txt*

Code examples are printed in courier .



1.6. OVERVIEW

In chapter two a short description of the M393 hardware can be found. The next chapter covers the installation and setup of the M-module as well as the connection of the measurement sources. In chapter 4 the operation and usage of the M393 is described in detail. AcQ provides APIS based example software for the M393, the software is described in chapter 5. Finally this document contains an Annex containing a bibliography, component image, technical data and the document history.



2. **PRODUCT OVERVIEW**

2.1. INTRODUCTION

The M393 is an 8-channel analog input M-module with differential inputs and an ADC resolution of 12- or 16-bit. The M393 has one ADC core with an analog multiplexer for signal routing. A local TMS320C203 DSP provides amongst other functions the signal routing, data acquisition, range selection and measurement correction. The operation of the local DSP is transparent to the user. Measurement results are continuously updated in dual ported memory without interference of the host. The front-end of the M393 is optically isolated, powered from either an on-board isolated DC/DC converter or from an externally applied source.

The M393 is available in several versions which differ with respect to the input circuitry, conversion resolution and isolated power supply:

• • •	M393/V16/WDC M393/V16/NDC M393/V12/WDC M393/V12/NDC M393/C16/WDC	 16-bit resolution with voltage inputs, with onboard DC/DC converter. 16-bit resolution with voltage inputs, no DC/DC converter. 12-bit resolution with voltage inputs, with onboard DC/DC converter. 12-bit resolution with voltage inputs, no DC/DC converter. 16-bit resolution with current inputs, with onboard DC/DC converter.
• •	M393/C16/NDC M393/C12/WDC M393/C12/NDC	16-bit resolution with current inputs, no DC/DC converter.12-bit resolution with current inputs, with onboard DC/DC converter.12-bit resolution with current inputs, no DC/DC converter.

The M393/V16/WDC, M393/V16/NDC, M393/V12/WDC and M393/V12/NDC each have four input ranges which are software selectable per channel: +/-10V bipolar, 0...10V unipolar, +/-5V bipolar and 0...5V unipolar. The M393/C16/WDC, M393/C16/NDC, M393/C12/WDC and M393/C12/NDC each have one 0...20mA input range.

The M-modules feature onboard active low-pass 2-pole input filters with a cut-off frequency of 1kHz and a programmable moving average filter for all channels.

The M393 family has no potentiometers since measurement correction is handled by the DSP. Correction is done by the DSP according to factory calibrated system parameters stored in an onboard EEPROM. The acquisition time is software programmable from 20 µseconds up to 1 millisecond per channel and channels can be individually enabled or disabled.

2.2. TECHNICAL OVERVIEW

Below an overview of the functionality of the M393 is listed.

- 8x differential analog inputs.
- 16-bit 10µs sampling analog-to-digital converter.
- Optional 12-bit version available.
- Accuracy 0.1% for voltage inputs and 0.5% for optional current inputs.
- 8x onboard active low-pass 2-pole input filters with a cut-off frequency of 1kHz.
- No potentiometers.
- Analog front-end optically isolated.
- Optional onboard isolated power supply (DC/DC converter) for analog front-end.
- With on-board DC/DC converter the module is operated from a single 5V supply.
- Data acquisition handled by TMS320C203 DSP, transparent for user.
- Measurement data corrected by the DSP according to calibration data stored in EEPROM.
- Programmable moving average filter.



- Averaging performed by the DSP to reduce noise influences.
- Measurement results continuously updated in dual ported memory.
- System configuration programmable through a command interface in dual ported memory.
- User programmable voltage input ranges:
 - +/-10V Bipolar (default)
 - 0..10V Unipolar
 - +/-5V Bipolar
 - 0..5V Unipolar
- Input range per channel adjustable.
- Optional 0..20mA current inputs.
- Software programmable update rate up to 50 kSPS (default).
- A08/D16 M-module interface.
- Host interrupts supported.
- Identification EEPROM.



3. INSTALLATION AND SETUP

3.1. UNPACKING THE HARDWARE

The hardware is shipped in an ESD protective container. Before unpacking the hardware, make sure that this takes place in an environment with controlled static electricity. The following recommendations should be followed:


- Make sure your body is discharged to the static voltage level on the floor, table and system chassis by wearing a conductive wrist-chain connected to a common reference point.
- If a conductive wrist-chain is not available, touch the surface where the board is to be put (like table, chassis etc.) before unpacking the board.
- Leave the board only on surfaces with controlled static characteristics, i.e. specially designed anti static table covers.
- If handling the board over to another person, touch this persons hand, wrist etc. to discharge any static potential.
- **IMPORTANT:** Never put the hardware on top of the conductive plastic bag in which the hardware is shipped. The external surface of this bag is highly conductive and may cause rapid static discharge causing damage. (The internal surface of the bag is isolating.)

Inspect the hardware to verify that no mechanical damage appears to have occurred. Please report any discrepancies or damage to your distributor or to AcQuisition Technology immediately and do not install the hardware.



3.2. CONNECTING THE MODULE

This section describes the pin-assignments of the 25-pole D-sub female front connector and the 24-pole female P2 header.

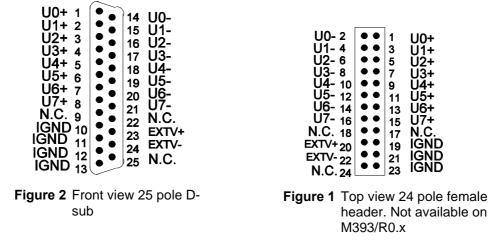

The signals labelled with Ux+ and Ux- are differential input pairs where x is the channel number. The IGND pins are connected to the isolated ground of the M393 and can be used as ground returns for input bias currents. For optional current inputs the differential inputs have a shunted resistor of 39Ù. Reserved pins must not be connected.

The analog front-end is powered from either an onboard DC/DC converter (M393/V16/WDC, M393/V12/WDC, M393/C16/WDC and M393/C12/WDC) or from an externally applied power supply (M393/V16/NDC, M393/V12/NDC, M393/C16/NDC and M393/C12/NDC) depending on the module version.

If the module has an board DC/DC converter the external power pins EXTV+ and EXTV- must not be connected. If the module has no onboard DC/DC converter an external power supply of +/-15V DC must be applied to EXTV+ and -15V DC must be applied to EXTV-, the power supply ground must be connected to IGND. For details on the power requirements please refer to section 6.3.

Note: Although the digital subsystem of the M393 is powered from the M-module bus the module does not initialize when no isolated power supply is available.

Note: The 24-pole female P2 header is not available on the M393 of revision R0.x .

For a description of the input circuitry refer to section 4.3.



4. FUNCTIONAL DESCRIPTION

This chapter gives a detailed description of the M393. The M-module interface is described as well as the operation of the M-module.

4.1. BLOCK DIAGRAM

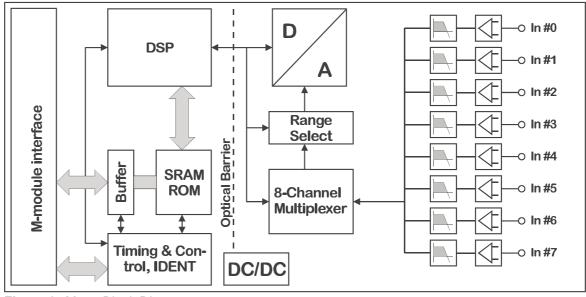


Figure 3 M393 Block Diagram

4.2. M-MODULE INTERFACE

The M393 has a A08/D16 INTA compliant M-module interface. The following sections give an overview of the M-module interface and memory organization of the M393.



4.2.1. MEMORY MAP OVERVIEW

The following table shows the address map of the M393 module. All addresses are relative to the base address of the M-module.

Offset	Name	Description
0x00	MDR0	Measurement data channel 0
0x0e	MDR7	Measurement data channel 7
0x10	RES	Reserved
0x3e	RES	Reserved
0x40	C_CMD	Command interface: command field
0x42	C_RES	Command interface: result field
0x44	C_PRM0	Command interface: parameter 0
0x62	C_PRM15	Command interface: parameter 15
0x64	GLOBSTAT	Global status
0x66	IMASK	Interrupt mask
0x68	IFLAG	Interrupt flags
0x6a	RES	Reserved
0x7e	RES	Reserved
0x80	PAGEREG	Page register, must be written with 0x100
0x82	CTRLREG	Host control register
0x84	RES	Reserved
0xfc	RES	Reserved
0xfe	EEPREG	Identification EEPROM register

Caution: Only 16-bit wide accesses are allowed. Do not write reserved fields.

Fields described in the memory map are either located in dual ported memory, offset 0x00 to offset 0x80 provided that the page register is set to 0x0100 or are implemented as hardware registers: page register, host control register and the EEPROM register.

The following sections give a detailed description of memory locations and hardware registers.



4.2.2. MEASUREMENT DATA WORDS

The memory locations MDR0 to MDR7 at offset 0x00* to offset 0x10* contain the measurement results of channel 0 to channel 7. The data is represented in straight binary format. The following table shows the relation between the binary output codes and the corresponding ideal input values.

16-bit resolution								
Range	Code	Input						
+/-10 V (default)	0x0000 0x8000 0xffff	-10 V 0 V +9.999695 V						
010 V	0x0000 0x8000 0xffff	0 V +5V +9.999847 V						
+/- 5 V	0x0000 0x8000 0xffff	-5 V 0 V 4.999847 V						
05 V	0x0000 0x8000 0xffff	0 V 2.5 V 4.999924 V						
020 mA (optional)	0x0000 0x8000 0xffff	0 mA 10 mA 19.99970 mA						

12-bit resolution							
Range	Code	Input					
+/-10 V (default)	0x0000 0x0800 0x0fff	-10 V 0 V +9.9951 V					
010 V	0x0000 0x0800 0x0fff	0 V +5V +9.9976 V					
+/- 5 V	0x0000 0x0800 0x0fff	-5 V 0 V 4.9998 V					
05 V	0x0000 0x0800 0x0fff	0 V 2.5 V 4.9976 V					
020 mA (optional)	0x0000 0x0800 0x0fff	0 mA 10 mA 19.9951 mA					

The measurement results are continuously updated in the dual ported memory by the DSP. For details on the data acquisition refer to section 4.4.

The page register must be set to 0x0100

4.2.3. COMMAND INTERFACE

The M393 features a command interface for communication between the host and the local DSP. Through the command interface it is possible to configure special features of the M393, like setting the acquisition time, programming ranges etc. For operation in default mode (+/- 10V input range @ 20 µs acquisition time) no commands have to be executed.

The command interface consists of a command field, a result field and a parameter field:

Offset *	Name	Description
0x40	command	command field
0x42	result	result field
0x44	parm0	first parameter
0x62	parm15	last parameter

The page register must be set to 0x0100



Version: 1.7

The M393 can accept commands at any time provided that a previous requested operation is completed. Before a command is given make sure the command field is empty (no outstanding command present). Then write the parameters if any to the parameter field. After that the command must be written to the command field. When a command is handled by the DSP, return parameters if any, are stored in the parameter field, the result is updated in the result field and finally the command field is cleared by the DSP. The DSP is ready to accept new commands.

For a complete overview of the available commands and the usage refer to section 4.6.1.

4.2.4. GLOBAL STATUS WORD

The global status word at offset 0x64 (with the page register set to 0x0100) contains status information of the M-module. Under normal conditions the global status word is zero. A non-zero status word indicates a possible defect of the M-module and measurement results are not available. If after a power-up the problem still exists, contact AcQ for repair.

Under normal circumstances the global status word does not have to be accessed by the host.

4.2.5. INTERRUPT MASK WORD

The interrupt mask word is defined as follows:

IMR									(Offse	t: 0x6	6 (pa	age =	0x0′	100)
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
RDY	res	res	res	res	res	res	res	res	res	res	res	res	res	res	res
Reset	t:														
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Write	e only	,													

RDY Measurement cycle ready

RDY signals a measurement cycle ready (global status word is zero) or a fault situation (global status word is non-zero).


The interrupt mask register may only be written by the host. A bit set un-masks the corresponding interrupt. A bit cleared masks the interrupt.

Setting RDY will cause host interrupts to be generated at the end of every measurement cycle.



4.2.6. INTERRUPT FLAG WORD

The interrupt flag word is defined as follows:

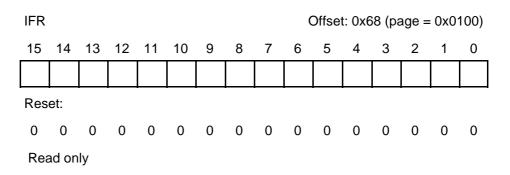

Since the M393 has currently one interrupt source the interrupt flag word is not used. However the interrupt flag register is implemented for compatibility reasons only.

4.2.7. PAGE REGISTER

The dual ported memory of the M393 is accessed using a page register for the upper address bits. The first 128 bytes of the address space of the M393 M-module is used as a "window" into the dual ported memory as described in the previous section.

PAGEREG								Off	set: C)x80
15	9	8	7	6	5	4	3	2	1	0
not used	A16	A15	A14	A13	A12	A11	A10	A9	A8	A7
Reset:										
	х	1	х	х	х	х	х	х	х	х
\\/nite_endu										

Write only


A16 - A7 Dual ported memory address bits

These bits determine the current dual ported memory page selected. A page has a length of 128 bytes (A6 - A0).

For normal operation the page register must be set to 0x0100. The page register is available for service purposes and must not be set to any other value than 0x0100.



4.2.8. HOST CONTROL REGISTER

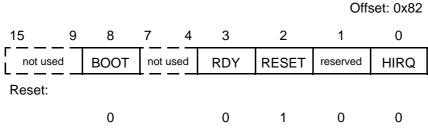



RDY Ready Bit

This bit must be cleared by the host by writing a logic '1'. The bit will be set by the M-module when all channels are updated.

RESET Local reset

When asserted, the M393 will be kept in reset state. After power-up the M-module is in reset.

HIRQ Host Interrupt Request

This bit reflects the state of the host interrupt line, one '1' means asserted. Writing a one '1' to this location clears the pending interrupt.

BOOT Boot selection

Default the local firmware is booted from ROM, however it is possible to boot the DSP from dual ported memory, therefore the BOOT bit must be set to '1' prior to a reset. The boot bit is available for service and debug purposes, so details are beyond the scope of this manual.

Caution: Do not use read-modify-write operations on the host control register (AND/OR instructions). Reserved bits must be written by a logic '0'.



Version: 1.7

4.2.9. IDENTIFICATION EEPROM

The identification of an M-module is implemented using a serial EEPROM with a 64*16 word organisation. The industry-standard component 93C46 is used in order to make the identification compatible throughout the complete range of available M-modules. Access to the identification EEPROM takes place through the following register:



Read / Write

CS Chip-Select

This bit corresponds to the chip select input of the EEPROM.

CLK Clock

This bit corresponds to the clock input of the EEPROM.

DI/O Data input/output

This bit corresponds to the data input of the EEPROM when writing and data output of the EEPROM when reading.

For information on controlling the EEPROM refer to the NM93C46 data sheets. For information on the memory organization refer to the M-module Specification.

- **Note:** The identification EEPROM on the M393 is only accessible by the host when the M-module is kept in reset. (Bit #2 in the host control register 'set').
- **Caution:** On the M393 the EEPROM is not only used for identification purposes but also for storage of calibration data used by the local DSP . Therefore writing to or clearing from the EEPROM by the host will result in erroneous behaviour.



4.3. INPUT CIRCUITRY

This section describes the input circuitry of the M393, this might be useful for connecting measurement sources.

The picture below shows the simplified schematics of input channel 0 of the M393, channel 1 to channel 7 are similar.

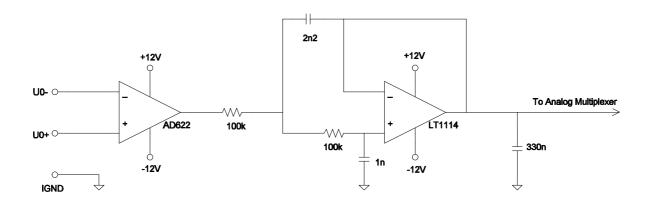


Figure 4 M393 Input Circuitry

The input circuitry consists of an AD622 instrumentation amplifier with an input impedance of 10GÙ/2pF. The output of the instrumentation amplifier is connected to a 2-pole active low pass filter build around a precision amplifier, the LT1114. The filter output goes to an input of an analog multiplexer. The output of the multiplexer is connected to the range selection circuit and finally to the input of an ADC. For details on the multiplexer and the ADC refer to section 4.4.

Input signals are connected to the differential inputs U+ and U-. The IGND connection can be used as returns for input bias currents etc.

The M393 with current inputs has a shunt resistor of 39Ù between U+ and U-.

See the table below for the technical specifications of the input circuit:

Input Impedance (current inputs)390/2pFMaximum differential input voltage+/-25VMaximum common mode voltage+/-12V referenced to IGNDInput filter cut-off frequency1kHz	Maximum differential input voltage Maximum common mode voltage	+/-12V referenced to IGND
---	---	---------------------------

Detailed information on connecting sensors or other measurement sources are beyond the scope of this manual.



4.4. DATA ACQUISITION

The data acquisition is handled by the onboard TMS320C203 DSP without any user intervention. However this section describes the acquisition process for a better understanding of the operation and usage of the M393.

The operation will be described according to the simplified block diagram below:

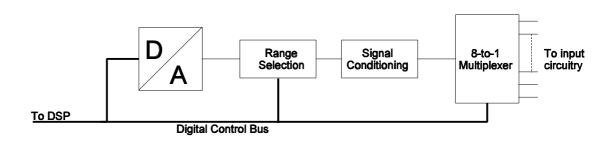


Figure 5 M393 Data Acquisition Control

Via the digital control bus the DSP is able to select an input channel and to set the range selector to the required position. The range will be set according to the configuration of the corresponding input channel. The acquisition loop will continuously scan the input channels starting at channel 0 followed by channel 1 and after channel 7 a new loop is initiated. Channels can be individually disabled or enabled from servicing.

The acquisition time is the time between two samples and is software programmable between 20 μ s and 1ms. The acquisition loop time depends on the number of enabled channels and the programmed acquisition time. The maximum throughput is 20 μ s (one channel enabled).

The used ADC is an ADS7809 from Burr-Brown with a resolution of 16-bits. The DSP takes care of correcting the samples according to calibration parameters stored in EEPROM.

Furthermore the DSP is used for implementation of a digital moving average (MA) filter for noise compensation and better DC accuracy. The MA filter can be configured for averaging over 8, 16, 32, 64 or 128 samples and it can be disabled.



The flow-chart below shows the acquisition loop:

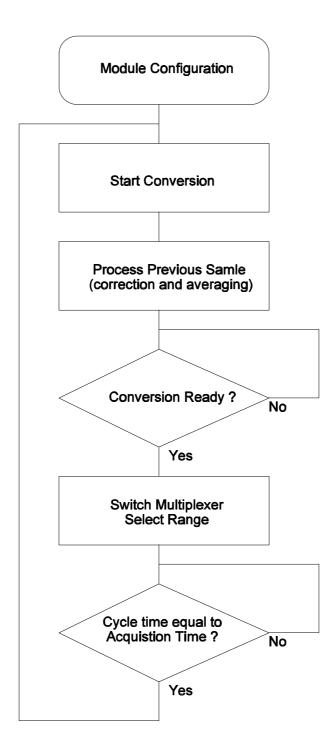


Figure 6 M393 Acquisition Cycle



The resolution of the Analog-to-Digital process is either 12-bit or 16-bit depending on the version of the M-module. The table below contains the specification of the A-to-D conversion.

Resolution	16 bits or 12 bits
Accuracy	16 bit voltage inputs: 0.1% 16 bit current inputs: 0.5 % 12-bit voltage inputs: 0.5 % 12-bit current inputs: 0.75 %
Maximum throughput rate	50 kHz

For details on the A-to-D converter refer to the Burr-Brown ADS7809 data sheet.

For more information on channel configuration, configuring acquisition timing and dis-/enabling channels refer to section 4.2.3.

4.5. RESET PROCEDURE

After power-up the M393 is kept in reset. The Identification EEPROM can be read by the host. Before any control operation are possible the M393 must be started according to the following reset procedure written in ANSI-C:

```
#define CTRLREG
                     ((volatile unsigned short *)(<base>+0x82))
#define PAGEREG ((volatile unsigned short *)(<base>+0x80))
#define GLOBSTAT ((volatile unsigned short *)(<base>+0x64))
*CTRLREG = 0x0004;
                                          /* put module in reset */
                                          /* write 0x0100 to page register */
*PAGEREG = 0 \times 0100;
                                          /* release reset */
*CTRLREG = 0x0000;
                                          /* wait until RDY bit is set */
while(!(*CTRLREG & 0x00008));
if (GLOBSTAT == 0)
                                          /* check global status */
       /* M393 ready for usage */
else
       /* Hardware failure */
```

The global status word at offset 0x64 contains status information of the M-module. Under normal conditions the global status word is zero. A non-zero status word indicates a possible defect of the M-module and measurement results are not available. If after a power-up the problem still exists, contact AcQ for repair.

Make sure only 16-bit write and read accesses are performed. After the reset sequence the M393 will continuously acquire the input channels.



4.6. M-MODULE OPERATION

The M393 is configured through the command interface described in section 4.2.3. This paragraph gives an overview of the available user commands and their usage.

4.6.1. COMMAND SET OVERVIEW

This section lists the commands available to the user, the possible return codes and contains an programming example of command execution on the M393.

Command set:

Command	Hex	Description
DONE	0x0000	command completed
SYNC	0x5a5a	synchronize firmware, sign of live
VERSION	0x1000	returns version information
SETUP	0x0001	setup channel configuration
SETACQTIME	0x0002	set acquisition time
MAFILTER	0x0003	configure the moving average filter

Result codes:

Result	Hex	Description
NOERR	0x0000	no error
UNKCMD	0x8001	unknown command
ADCFAIL	0x8002	a-to-d converter failure
ILLREQ	0x8003	illegal request

Below you can find a software example written in ANSI-C:



Get M-module information

4.6.2. SYNC COMMAND

SYNC	Sign of live
Command:	0x5a5a
Inputs:	None
Outputs:	None
Function:	This function is intended to check whether or not the DSP is running. The local software takes no special action and terminates the execution normally by setting the result field to NOERR and clearing the command field.

4.6.3. VERSION COMMAND

VERSION

Command: 0x1000

Inputs: None

Outputs:	Parameter 1: Parameter 2: Parameter 3:	Module number (should be 393d) Firmware version number Input type (0: voltage inputs or 1: current inputs) Resolution: (16d or 12d) DSP clock frequency (0 if 57MHz and 1 if 40MHz)

Function: This function returns information about the hardware configuration and the firmware. When the function returns, parameter 0 contains the M-module number which should be 393(d). Parameter 1 contains the firmware version number: for example 10(d) which means version 1.1. Parameter 2 indicates the input type, 0 for voltage inputs, 1 for current inputs and parameter 3 specifies the resolution in number of bits: either 16(d) or 12(d). Parameter 4 provides information about the DSP clock frequency, 0 (default M393) indicates a 57MHz DSP clock, 1 (special M393) indicates a 40MHz DSP clock.



4.6.4. SETUP COMMAND

Setup Acquisition Time

- Command: 0x0001
- Inputs: Channel 0 control Channel 1 control Channel 7 control
- Outputs: None

Function: This command is provided to setup the channel configuration. The channel configuration specifies the input range for a channel or causes the channel to be disabled. Parameter 0 contains the channel 0 control word, parameter 1 contains the control word for channel 1 etc.

All control words must be specified (parameter 0 to 7) before the command is given. The table below lists the available control words:

Input Range	Control Word
+/-10 V bipolar	0x0000 (default)
010 V unipolar	0x0001
+/-5 V bipolar	0x0002
05 V unipolar	0x0003
Channel disabled	0x0004

Since the M393 with current inputs has only one input range the control words 0x0000, 0x0001, 0x0002 and 0x0003 have no effect. However the command can be used to enable (control word 0) or disable (control word 4) the channel.



Version: 1.7

4.6.5. SETACQTIME COMMAND

SETACQTIME

Setup acquisition time

- **Command:** 0x0002
- Inputs: Acquisition time

Outputs: None

Function: This command is provided to configure the acquisition time. Input parameter 0 specifies the throughput. The table below shows the relation between the input parameter and the acquisition time.

Acquisition time	Input parameter
20 μs	0x0000 (default)
100 μs	0x0001
500 μs	0x0002
1000 μs	0x0003

4.6.6. MAFILTER COMMAND

MAFILTER

Configure moving average filter

- **Command:** 0x0003
- Inputs: Filter selection
- Outputs: None
- **Function:** This command is provided to configure the digital moving average (MA) filter. Input parameter 0 specifies the filter behaviour. The table below shows the relation between the input parameter and the MA filter.

Filter	Input parameter
disabled	0x0000
8 samples	0x0001
16 samples	0x0002
32 samples	0x0003 (default)
64 samples	0x0004
128 samples	0x0005



4.7. READING SAMPLES

After reset the M393 starts gathering samples without user intervention. The default operation is all channels enabled and the range is set to +/- 10V (or 0...20mA in case of current inputs). Data can be obtained from the measurement data registers MDRx (x is the channel number) at any time. However the M393 features a signalling mechanism which indicates that all channels are refreshed. This is done with the RDY bit in the control register CTRLREG.

It is recommended to use the RDY bit in the host control register to check if new samples are available. The RDY bit must be cleared by the host by writing a logic '1' to bit #3 of the host control register. The RDY bit will be set by the M393 when a measurement cycle is completed. An example programmed in ANSI-C:

```
#define CTRLREG
                   ((volatile unsigned short *)(<base>+0x82))
#define PAGEREG
                   ((volatile unsigned short *)(<base>+0x80))
#define MDR0 ((volatile unsigned short *)(<base>+0x00))
#define MDR1 ((volatile unsigned short *)(<base>+0x02))
#define MDR1
                  ((volatile unsigned short *)(<base>+0x02))
etc.
unsinged short data[8];
/*
 *
      Execute infinite loop for logging samples
 */
*CTRLREG = 0x0008;
                                /* clear RDY bit by writing a logic '1' */
for (;;) {
      while(!(*CTRLREG & 0x0008)); /* wait until RDY bit is set */
      *CTRLREG = 0x0008; /* clear RDY bit by writing a logic `1' */
      data[0] = *MDR0;
                                /* get measurement results */
      data[1] = *MDR1;
      . . . .
      /* store/compute measurement results */
}
```

4.8. INTERRUPT HANDLING

The M393 is capable of generating interrupts of type A, software-end-of-interrupt. Because the M393 is not capable of delivering an interrupt vector, this must be handled by the carrier board.

When the RDY-bit in the IMASK register at offset 0x66 is set the M393 will generate an interrupt request when a measurement cycle is complete.

The interrupt service routine must acknowledge the interrupt request by writing a logic "1" to bit #0 of the host control register.



An example for using interrupts:

```
#define CTRLREG
                 ((volatile unsigned short *)(<module base>+0x82))
#define PAGEREG ((volatile unsigned short *)(<module base>+0x80))
#define IMASK
                 ((volatile unsigned short *)(<module base>+0x66))
void m393isvc(void)
{
      if (*CTRLREG & 0x0001)
                                   /* if interrupt caused by M393 */
                                   /* then clear pending interrupt */
            *CTRLREG = 0x0001;
     if (*CTRLREG & 0x0008) {
                                  /* if ready flag is set */
                                   /* then clear RDY flag */
            *CTRLREG = 0x0008;
                                    /* signal measurement cycle is ready */
            . . .
      }
}
void main(void)
      install_irq(..., &m393isvc); /* install interrupt handler */
     *IMR = 0x8000;
                                   /* enable RDY interrupt */
      . . .
                                    /* program body */
      . . .
}
```

Note: To avoid performance problems when the RDY interrupt is enabled, most applications will require a lower acquisition time than the default value of 20 μs.





5. SOFTWARE

This chapter describes the example software which is available for the M393 12-/16-bit ADC Module with 8x Differential Inputs. The example software is available in ANSI-C source code and consists mainly of an M393 function library which provides functions for easy access to the M393 and a demo program which illustrates the usage of the software library.

The M393 library functions are APIS based, physical accesses and interrupt support are handled by APIS, AcQ Platform Independent Interface Software. The next section contains general information on APIS, for detailed information please refer to the APIS Programmer's Manual.

5.1. APIS SUPPORT

AcQ produces and supports a large number of standard M-modules varying from networking and process I/O to motion control applications. Physically, the M-modules are supported by a large number of hardware platforms: VMEbus, PCI, CompactPCI as well as a wide variety of operating systems: OS-9, Windows NT, Linux etc.

APIS offers a way to program platform independent applications, example- and test software for controlling hardware. Application software written for APIS only needs re-compiling for a particular platform and is operational with little effort (provided that the application is operating system independent).

5.1.1. CONCEPT

Hardware accesses to registers and memory are handled by APIS. Some minor operating system dependent functions frequently used in hardware related software, such as interrupt handling and a delay function are also provided by APIS.

APIS platform support consists of an Application Programming Interface in the form of definition files coded in ANSI-C and platform dependent modules e.g. source files, libraries and/or drivers. In the most simple outline, a platform dependent APIS module consist of nothing more then macro definitions in which APIS calls are substituted by direct hardware accesses. But in most cases an APIS module will consist of a library with interface routines and in some implementations a device driver is needed for interaction with the operating system.

5.1.2. API

The Application Programming Interface for APIS is implemented in two ANSI-C coded definition files: *apis.h* which contains general definitions and *platform_apis.h* which contains platform specific definitions and references to the APIS function calls.

The application source file must include the APIS header file *apis.h.* Porting of the application to a platform, consists of re-compiling the source code with a defined pre-processor macro for selection of the used platform. The APIS header file contains generic APIS definitions and includes a platform specific header file according to the platform selection macro.

APIS calls are translated to the platform specific calls in the APIS header file and the platform specific definition file *platform_apis.h* (*platform* is a name that identifies a hardware and operating system combination, e.g. i4000os9).

The macro PLATFORM must be defined, either via a pre-processor definition provided at compile time or via a macro-definition in the application source.



5.1.3. CODE GENERATION

APIS based example software is available in ANSI-C source code. Source code files must be compiled with the pre-processor definition PLATFORM set to a valid value, conforming the target platform. Building of the example software for the M393 is platform dependent, for details refer to the release notes of the APIS support package of the target platform and the APIS Programmer's Manual.

Examples of APIS supported platforms are i4000os9, i2000dos, i3000win etc.

5.2. TYPE DEFINITIONS AND STRUCTURES

The table below contains a list and description of all types and structures used in the M393 example software (standard ANSI-C types are not listed).

Name	Туре	Description
INT8	char	8-bit signed data
UINT8	unsigned char	8-bit unsigned data
INT16	short	16-bit signed data
UINT16	unsigned short	16-bit unsigned data
INT32	long	32-bit signed data
UINT32	unsigned long	32-bit unsigned data
PHA8	volatile unsigned char *	8-bit physical access
PHA16	volatile unsigned short *	16-bit physical access
PHA32	volatile unsigned long *	32-bit physical access
APIS_PATH	unsigned long	APIS physical path ID
APIS_HANDLE	void *	APIS physical path handle
APIS_WIDTH	int	APIS access size in bytes
IDCODE	union { struct { short synccode, modnum, revision, modchar, res[4]; char manstr[16]; } id; short reg[16]; }	ID EEPROM contents Sync code (0x5346) Module number (binary coded) revision number Module characteristics reserved manufacturer string ID data raw data



5.3. FUNCTION REFERENCE

This section contains the reference of the functions provided by the M393 software library.

5.3.1. GENERAL FUNCTIONS

m393_boot()

Boot the M393

Syntax:int m393_boot (APIS_HANDLE handle)Description:Boot the M393 from ROM.Arguments:APIS_HANDLE handle
Hardware path handle returned by apis_open()Returns:0 or -1 in case of hardware failureExample:m393_boot(handle); /* boot m393 */

m393_ramboot()

Boot the M393 from RAM

Syntax: int m393_ramboot (APIS_HANDLE handle)

- **Description:** Download bootfile to dual port memory, the DSP will load the bootfile from RAM. To enable this function the macro BOOT_FROM_RAM must be defined as TRUE and a boot-image must be linked to the application.
- Arguments: APIS_HANDLE handle Hardware path handle returned by apis_open()
- Returns: 0 or -1 in case of hardware failure
- Example: m393_boot(handle); /* boot m393 */



m393_	cmd()
	- \/

Execute command

- Syntax: int m393_cmd (APIS_HANDLE handle, UINT16 command, UINT16 *pArgList, int ni, int no)
- **Description**: Copy command parameters to the parameter field in shared ram of the M-module. Execute command and wait for the command to be completed. Copy the result parameters and return with the result code obtained from the firmware.

Command	Description	
SYNC	Synchronize firmware, sign of live	
VERSION	Returns version information	
SETUP	Setup channel configuration	
SETACQTIME	Set acquisition time	
MAFILTER	Configure the moving average filter	

Below is a table with all available commands:

Arguments:	APIS_HANDLE handle Hardware path handle	
	UINT16 command	
	Firmware command void *pArgList	
	Pointer to the command parameter list	
	int ni	
	Number of input command parameters int no	
	Number of output command parameters	

Returns: Command result code

Command result codes:

Result	Description
NOERR	No error
UNKCMD	Unknown command
ADCFAIL	A-to-D converter failure
ILLREQ	Illegal request

Example: m393_cmd(handle, SYNC, (UINT16*)(¶ms), 0, 0);



m393_install_irq()

Install interrupt handler

Syntax:	<pre>int m393_install_irq(APIS_HANDLE handle)</pre>	
Description:	Install interrupt handler and unmask interrupt.	
Arguments:	APIS_HANDLE handle	

hardware path handle

Returns: Returns NOERR or -1 in case of error installing the interrupt handler

Example: m393_install_irq(handle); /* install interrupt handler */

m393_remove_irq()

Remove interrupt handler

Syntax: int m393_remove_irq(APIS_HANDLE handle)

Description: Removes interrupt handler and masks interrupt.

Arguments: APIS_HANDLE handle Hardware path handle

Returns: NOERR

Example: m393_remove_irq(handle); /* remove interrupt handler */

m393_irqh()

Interrupt handler

Syntax: int m393_irqh(APIS_HANDLE handle)

Description: The interrupt handler will clear the interrupt of the m393. Pending interrupts are cleared with the IACK command. Code which has to be executed when the interrupt occurs must be added to this function.

- Arguments: APIS_HANDLE handle Hardware path handle
- **Returns:** 0 or -1 if interrupt is not from M393



m393_setupchan()

Setup channels

Syntax: int m393_setupchan(APIS_HANDLE handle, UINT16 *inp_range_list)

Description: Configure input range of each channel. See following table for valid input ranges.

Input range	Description
V10BI	+/- 10 V bipolar
V10UNI	0 10 V unipolar
V5BI	+/- 5 V bipolar
V5UNI	0 5 V unipolar
DISCHAN	Disable channel

Arguments: APIS_HANDLE handle Hardware path handle UINT16 *inp_range_list Pointer to an array with input ranges for channel 0-7

Returns: NOERR

Example: m393_setupchan(handle, (UINT16*)(&inp_range_list));

m393_setupallchan()

Setup all channels

Syntax: int m393_setupallchan(APIS_HANDLE handle, UINT16 inp_range)

Description: Configures channel (0-7) with the same input range. See table in m393_setupchan() for valid input range.

Arguments: APIS_HANDLE handle Hardware path handle UINT16 inp_range Input range for channel 0-7

Returns: NOERR

Example: m393_setupallchan(handle, V10BI);



m393_setupacqtime()

Setup acquisition time

Syntax: int m393_setupacqtime(APIS_HANDLE handle, UINT16 throughput)

Description: Configure the acquisition time for each channel. See following table for valid acquisition times.

throughput	Description
TIME20us	20 microseconds
TIME100us	100 microseconds
TIME500us	500 microseconds
TIME1000us	1000 microseconds

Note: The acquisition time is per channel. E.g. If the acquisition time is set to 20 μ s and all channels are enabled, each channel is updated after 8 * 20 = 160 μ s.

Arguments: APIS_HANDLE handle Hardware path handle UINT16 throughput Acquisition time

- Returns: NOERR
- **Example:** m393_setupacqtime(handle, TIME1000us);



m393_configmafilter()

Configure MA filter

Syntax: int m393_configmafilter(APIS_HANDLE handle, UINT16 filter_beh)

Description: Configures moving average filter. If MA filter is enabled, it will be applied to all channels. See following table for valid values for filter_beh.

filter_beh	Description
DISFILT	Disable filter
SAMPLE8	8 samples
SAMPLE16	16 samples
SAMPLE32	32 samples (default)
SAMPLE64	64 samples
SAMPLE128	128 samples

Arguments: APIS_HANDLE handle hardware path handle UINT16 filter_beh filter behaviour

Returns: NOERR or ILLREQ when filter_beh has an illegal value

Example: m393_configmafilter(handle, SAMPLE64);

m393_readchannel()

Read data from channel

Syntax: int m393_readchannel(APIS_HANDLE handle, UINT16 channel, UINT16 *data)

Description: Reads data from one channel.

Arguments: APIS_HANDLE handle hardware path handle UINT16 channel number of channel UINT16 *data pointer to data from channel

Returns: NOERR or -1 when read command has failed.

Example: m393_readchannel(handle, 3, &data);



m393_check_rdybit()

Check if RDY bit is set

- **Syntax:** int m393_check_rdybit(APIS_HANDLE handle)
- **Description:** Checks if RDY bit is set. The RDY bit is set when one measurement cycle is completed.
- Arguments: APIS_HANDLE handle hardware path handle

Returns: Returns TRUE when RDY bit is set and FALSE when it is not set.

Example: m393_wait4rdy(handle);

m393_wait4rdybit()

Wait till RDY bit is set

Syntax: void m393_wait4rdybit(APIS_HANDLE handle)

- **Description:** Polls RDY bit until it is set. The RDY bit is set when one measurement cycle is completed.
- Arguments: APIS_HANDLE handle hardware path handle
- Returns: Nothing
- **Example:** m393_wait4rdy(handle);

m393_clear_rdybit()

Clear RDY bit

Syntax: void m393_clear_rdybit(APIS_HANDLE handle)

- **Description:** Clears RDY bit.
- Arguments: APIS_HANDLE handle hardware path handle
- **Returns:** Nothing

Example: m393_clear_rdybit(handle);




5.4. SOFTWARE DISTRIBUTION

This section gives an overview of the software distribution.

File	Description
M393\SOFTWARE\m393rel.txt	Release notes
M393\SOFTWARE\LIB\m393lib.c	APIS based ANSI-C M393 software library
M393\SOFTWARE\LIB\m393defs.h	Definitions for M393 software library
M393\SOFTWARE\EXAMPLE\m393demo.c	Demo program
M393\SOFTWARE\EXAMPLE\makefile.bor	Example makefile for Borland BCC tools
M393\SOFTWARE\EXAMPLE\makefile.os9	Example makefile for Microware/OS-9
M393\SOFTWARE\EXAMPLE\makefile.lin	Example makefile for Linux
MMODID\SOFTWARE\LIB\modideep.c	M-module ID EEPROM software library
MMODID\SOFTWARE\LIB\ideeprom.h	M-module ID EEPROM definitions

M393 example software is APIS based, therefore APIS support for the target platform is required for code generation.

The following figure is an example of the M393 software integrated in the APIS environment with as target platform the i4000/OS-9.

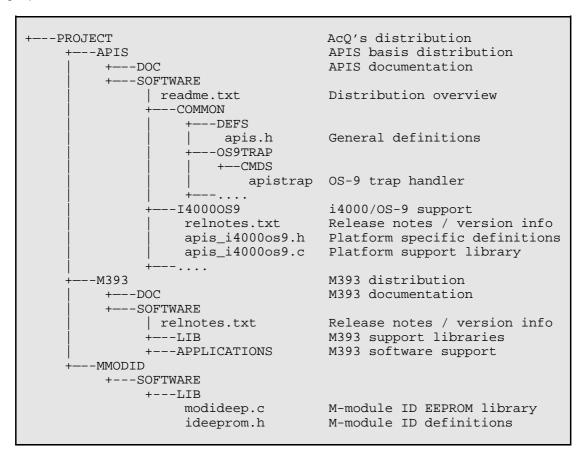

Code generation is platform dependent, for information on building the software please refer to the release notes of the target platform and the APIS Programmer's Manual.



6. ANNEX

6.1. BIBLIOGRAPHY

Specification for M-module interface and physical dimensions: M-module specification manual, April 1996, MUMM. Simon-Schöffel-Strasse 21, D-90427 Nürnberg, Germany.

APIS Programmer's Manual AcQuisition Technology P.O. Box 627, 5340 AP Oss, The Netherlands.

Data Sheet of the NM93C46 Memory Databook 1992 edition (400069) National Semiconductor Corporation 1111 West Bardin Road; Arlington, TX76017, United States

Data Sheet of the ADS7809 Mixed Signal Products Burr-Brown IC Data Book Burr-Brown Corporation; P.O. Box 11400 Tucson, AZ 85706-1400, United States

Data Sheet of the AD622 Analog Devices Inc. One Technology Way, P.O. Box 9106, Norwood, MA 02063-9106, United States

6.2. COMPONENT IMAGE

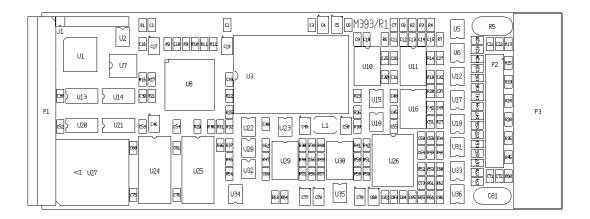


Figure 7 M393 Component Image



6.3. TECHNICAL DATA

Slots on the base-board:

Requires one 16-bit M-module slot.

Connection:

To base-board via 40 pole M-module interface. To peripheral via 25 pole D-sub connector.

Power supply with on-board DC/DC converter: +5VDC ±10%, typical 850mA.

Power supply without on-board DC/DC converter:

+5VDC ±10%, typical 250mA (obtained from M-module bus)

+15VDC ±5%, maximal 200mA (externally applied)

-15VDC ±5%, maximal 100mA (externally applied)

Temperature range:

Operating: 0..+60EC. Storage : -20..+70EC.

Humidity:

Class F, non-condensing.



6.4. DOCUMENT HISTORY

- Version 1.0 First release
- Version 1.1 Fax number on cover corrected Spelling errors corrected M393/R1 reference added
- Version 1.2 Adapted for firmware revision 1.2
- Version 1.3 New layout APIS support added
- Version 1.4 Example code changed
- Version 1.5 Modified for firmware release 1.4
- Version 1.6 Modified for firmware release 1.5 M393C12 and M393C16, 51E shunt replaced with 39E shunt resistor Example code removed.
- Version 1.7 Description of M393 for external isolated power supply added.

